




Service Manual HY09-SM020/US

 [www.khadamathydraulic.com](http://www.khadamathydraulic.com)  
Tell: 021-55882749  
Tell: 021-33488178  
Fax: 021-33488105


## Service Manual PGP020™

Effective: July 1, 2006  
Supersedes: All Others

---

### PGP020 Series

---

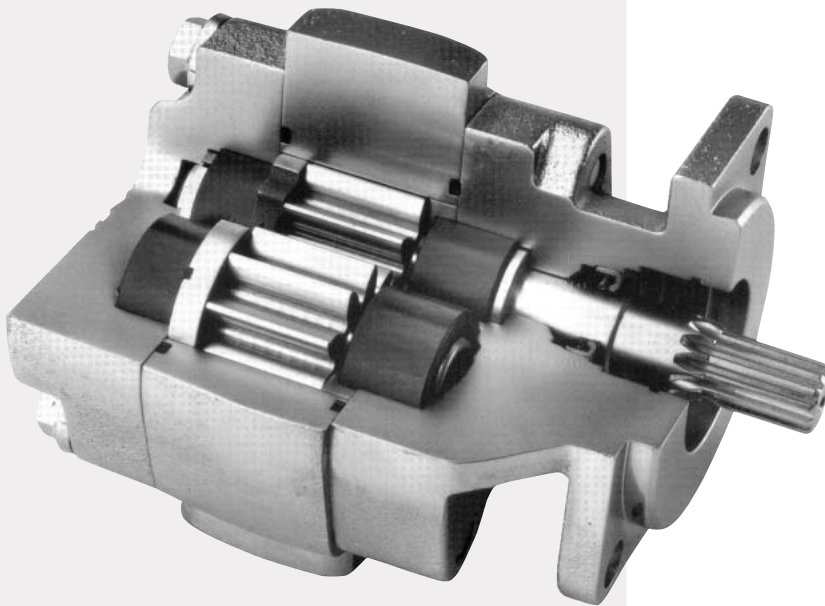

## **The Parker Hannifin Gear Pump Division Assures:**

- Consistent quality
- Technical innovation
- Premier customer service

## **Worldwide Sales and Service**

Parker operates sales and service centers in major industrial areas worldwide. Call 1-800-C-PARKER for more information, or for a synopsis of the Gear Pump Division, contact a Parker representative.

The Gear Pump Division's ability to engineer specialty products for unique applications has kept us at the forefront of technology, and ensured our position as the industry leader. Our success has come from providing a quality product with excellent sales and service support.

We manufacture hydraulic components for a wide range of industries including:

- Construction
- Refuse/dump truck
- Material handling
- Forestry
- Agriculture
- Industrial



### **WARNING**

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

### **Offer of Sale**

The items described in this document are hereby offered for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. This offer and its acceptance are governed by the provisions stated in the "Offer of Sale".

© Copyright 2006, Parker Hannifin Corporation, All Rights Reserved.




**Parker Hannifin Corporation**  
Gear Pump Division  
Youngstown, Ohio USA

**Contents**

**Index**

General Instructions ..... 4  
Cleanliness ..... 4  
Cautions ..... 4  
Exploded View and Parts List ..... 5  
PGP020™ Disassembly Instructions ..... 6  
PGP020™ Assembly Instructions ..... 9  
Part Replacement Guide ..... 12  
Tool List ..... 13  
Lubrication and Oil Recommendations ..... 14  
Recommended Start-up Procedure  
for New or Rebuilt Pump or Motor ..... 16  
Test Procedure Recommended ..... 17  
Instructions for Change of Rotation ..... 18  
Offer of Sale ..... 22

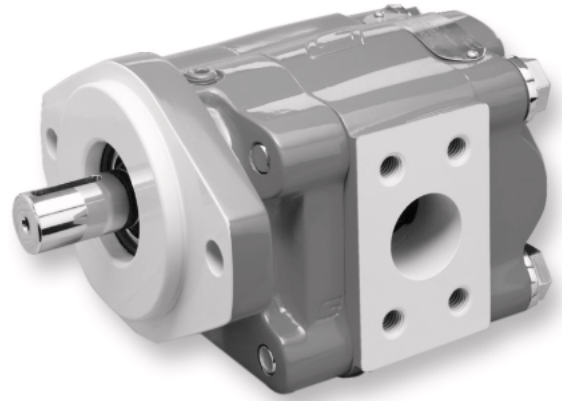

## Pump Service Instructions

### General Instructions

These service instructions will:

- familiarize you with the PGP020 series roller bearing pump, its component parts and their relative position;
- show the proper methods for disassembly and assembly;
- advise appropriate care and use of this hydraulic pump.

Following these instructions can prolong the life of your pump, and help achieve optimal performance.

We recommend you read this entire set of instructions before attempting any repair.

To ensure damage did not occur during shipment, check all replacement parts closely before installation.

### Cleanliness

Dirt is the enemy of any hydraulic system, so keeping equipment clean is a crucial maintenance requirement.

**MAKE SURE YOU DISASSEMBLE AND ASSEMBLE YOUR HYDRAULIC EQUIPMENT IN A CLEAN AREA.**


**TO PREVENT PERSONAL INJURY, SAFETY GLASSES AND STEEL TOE SHOES SHOULD BE WORN.**

### Cautions

- 1) Parker replacement parts are made to original equipment standards. For assured quality of material and workmanship and for compatibility in assembly, **USE ONLY GENUINE Parker REPLACEMENT PARTS.**
- 2) If it becomes necessary to pry apart castings, use extreme caution not to mar or damage the machined surfaces. Excessive force while prying can result in misalignment and seriously damage parts.
- 3) If component assembly is difficult, do not force items and never employ an iron hammer. For a complete list of recommended tools, see Page 11.
- 4) Gears are closely matched, therefore, they must be kept together as a set when removed from the unit. Handle with care to avoid damage to the journals, faces and teeth.
- 5) Never hammer roller bearings into bores. Use only an arbor press or other suitable tool.
- 6) It is important to airblast all parts and wipe them with a clean, lint-free cloth before assembly.

## Exploded View and Parts List

Item No.	Description	Required	Ten Digit No. (TDN)
1	Snap Ring	1	391-2686-063
2	Outboard Bearing	1	391-0381-040
	Outboard Spacer	1	391-3383-069
3	Lip Seal (pump)	1	391-2883-058
4	Seal Retainer (motor)	1	391-3381-040
5	Lip Seal (motor)	1	391-2883-119
6	Shaft End Cover	1	308-50XX-XXX
6A	Drain Plug (motor)	1	391-2282-XXX
7	Check Assemblies for Motors & Bi-Rotational Pumps	2	391-3681-001
	Plugs (pumps only)	1	391-2286-004
8	Ring Seals (per gear section)	2	391-2585-006
9	Roller Bearings (per gear section)	4	391-0381-906
10	Thrust plates (motor) (per gear section)	2	391-2185-913
	Thrust plates (pump) (per gear section)	2	391-2185-913
11	Pocket Seals (per gear section)	1 strip	391-2882-022 (Viton) 391-2882-051 (Buna)
12	Drive Shaft Gear Set	1 Set	312-29XX-XXX
13	Gasket Seals (per gear section)	2	391-2884-019
14	Gear Housing	1	308-8XXX-XXX
16	Bearing Carrier	-	308-7XXX-XXX
17	Connecting Shaft	-	312-1133-001
18	Gear Set	set	312-28XX-XXX
19	Port End Cover	1	308-3XXX-XXX
20	Washers	4	391-3782-146
21	Cap Screws (single units)	4	391-1401-XXX
	Studs (multiple units)	4	391-1425-XXX
22	Nuts (multiple units)	4	391-1451-115

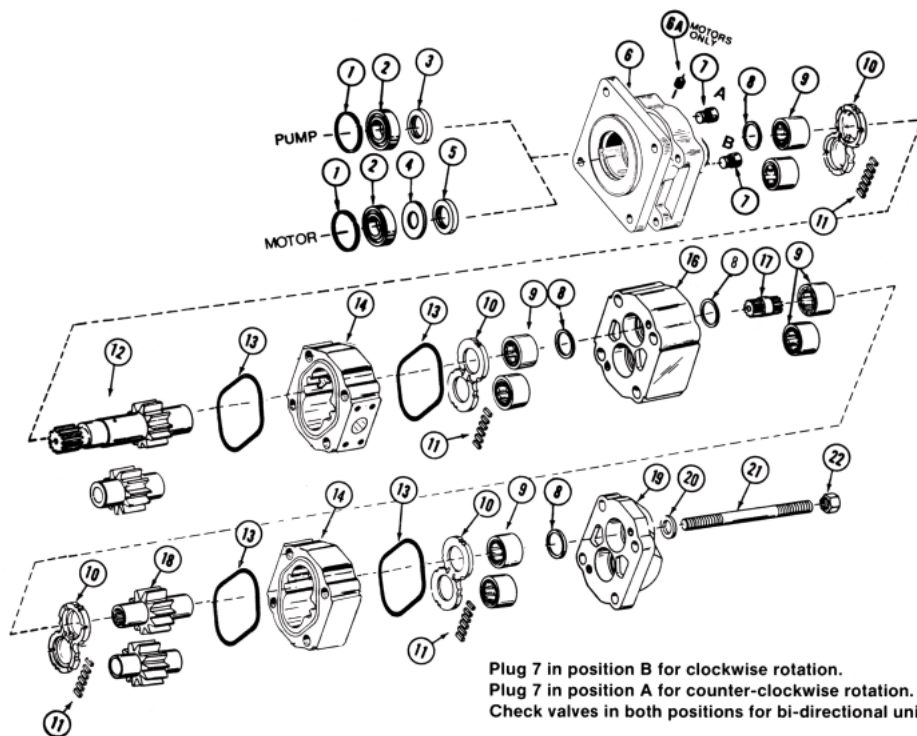


## PGP020™ Disassembly Instructions

### STEP 1




Place the pump in a vise with the drive shaft pointing down. Clamp unit on the sides of the mounting flange. Do not clamp on the pilot diameter as it may damage the sealing surface.

### STEP 2

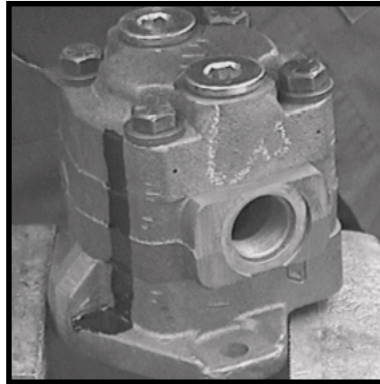


Mark each casting in the assembly with machinist ink or a prick punch to orient the castings, so that the unit can be reassembled later in the proper position.

### STEP 3

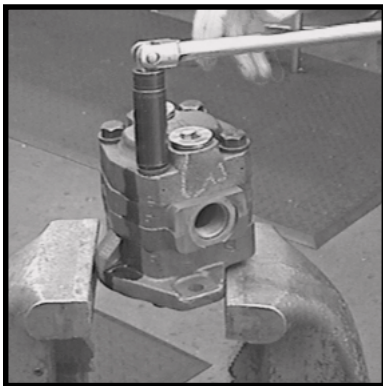

Loosen and remove the four, cap screws and washers with a 13/16" socket and wrench.


### STEP 4.1

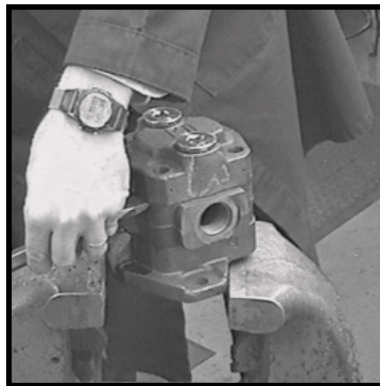

Remove the port end cover subassembly using steps 4.1 - 4.3:


4.1 Place the point of a large, screwdriver or a chisel on the parting line between the port end cover casting and the gear housing casting. Gently tap until a slight separation between the castings is detected.

### STEP 4.2

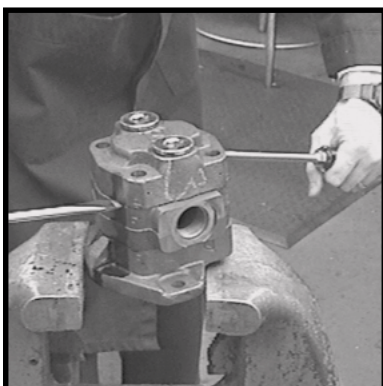

4.2 Place two, large, flat-bladed screwdrivers into the separation notches and pry up the port end cover until loose. **BE CAREFUL** not to nick, mar or scratch the machined casting faces.

### STEP 4.3

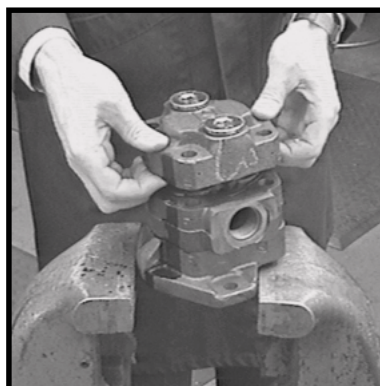


4.3 Lift off the port end cover subassembly.



## PGP020™ Disassembly Instructions


### STEP 5.1

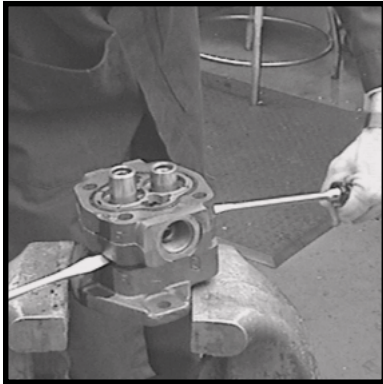

Remove the gear housing subassembly using steps 5.1 - 5.3:


5.1 Place the two, large, flat-bladed screwdrivers into the separation notches and pry up the gear housing until loose. BE CAREFUL not to nick, mar or scratch the machined casting faces.

### STEP 5.2

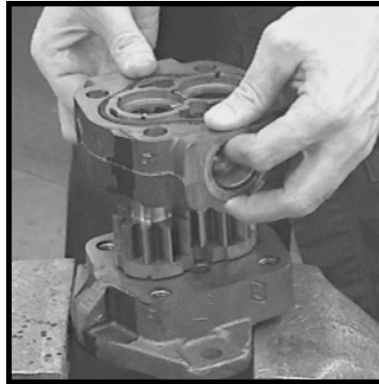

5.2 Lift off the gear housing subassembly.

### STEP 5.3

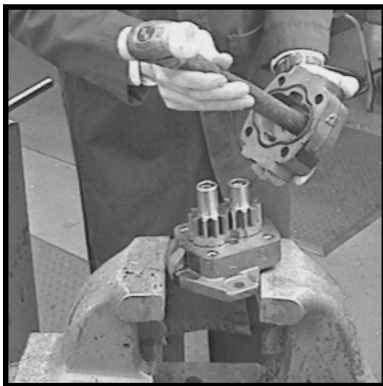


5.3 Remove the thrust plate from the housing. It may be necessary to gently tap the thrust plate with the handle of a hammer or screwdriver. Be careful not to bend or score the thrust plate. Remove and discard the six, small, rubber pocket seals from the thrust plate.

### STEP 6




Remove and discard the rubber section seals from the top and bottom gear housing faces.

### STEP 7

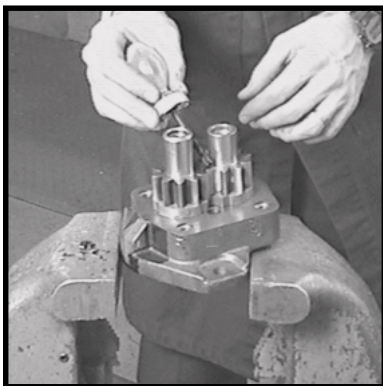

Wipe the gear face surface dry with a clean, lint-free cloth. Mark the teeth of the drive and driven gears (the gear set) at their mesh point with machinist ink or quick-dry marker. This is to index the gear set for proper orientation during reassembly.


### STEP 8

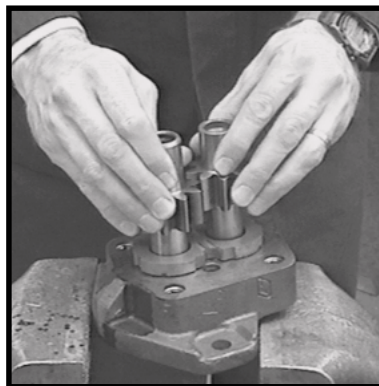

Remove the idler gear and the gear shaft. Keep them together as they are a matched set. Handle with care to avoid damage to the journals, faces and teeth.


## PGP020™ Disassembly Instructions

### STEP 9

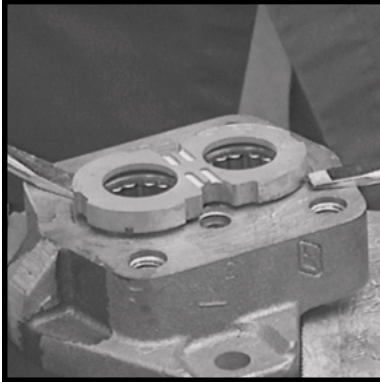


Gently lift off the thrust plate. Be careful not to bend or score the plate and mating surface of the casting. Remove and discard the six, rubber pocket seals from the back of the thrust plate.

### STEP 10

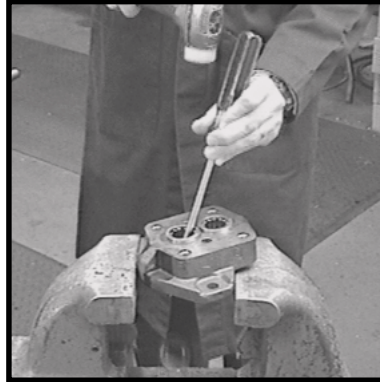


Remove lip seal. Place a lip seal removal tool (see Tool List P11) or a screwdriver tip against the inside of the lip seal and tap the screwdriver handle with a hammer. Be careful not to damage the roller bearing or the ring seal with screwdriver tip. Note: If bearings are to be removed from the casting, then step can be performed after Step 12.

### STEP 11

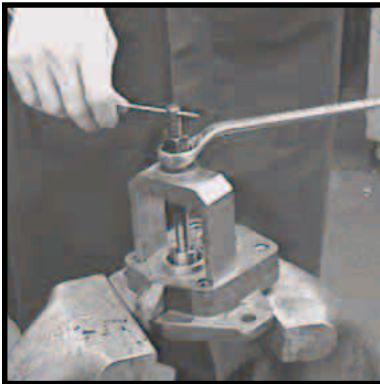


Use a bearing puller to remove the roller bearings. Note: This step is optional depending on the condition of the bearings.

### STEP 12

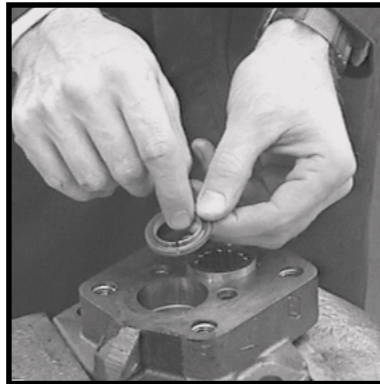

Remove the bronze ring seal from the gear shaft bearing bore in the shaft end cover and the port end cover castings.

### STEP 13

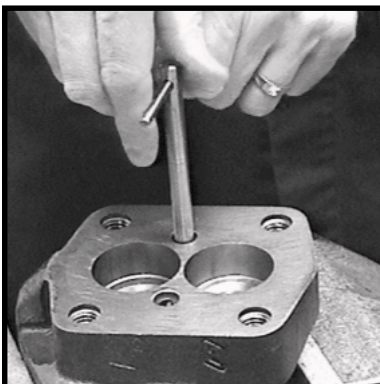

Remove the checks from the shaft end cover casting with the check tool (see Tool List on Page 11).

**CAUTION: Failure to follow the recommended assembly instructions can result in poor performance or failure of the product. Product should be thoroughly tested to ensure proper operation before the unit is put back into service.**



## PGP020™ Assembly Instructions

### STEP 1




Stone all machined casting surfaces with a medium-grit carborundum stone. If the bearings were removed, deburr the bearing bore using a deburring tool. Rinse all parts in a solvent fluid. Air blast all parts and wipe them with a clean, lint-free cloth before starting the assembly.

### STEP 2




Coat the outside diameter of the lip seal with Permatex Aviation Form-A-Gasket No.3 Non-Hardening Sealant or equivalent. Be careful not to get Permatex on the inner lip of the seal as it will cause a lip seal leak.

### STEP 3

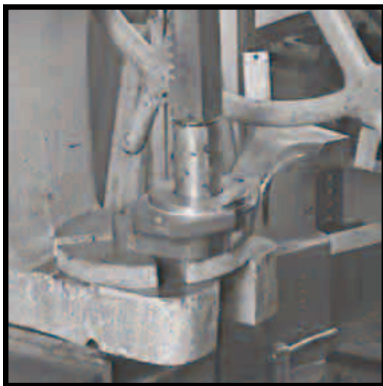


Place the shaft end cover on an arbor press with the pilot facing up. Place lip seal with the shoulder of the seal up, at the top of the seal bore. Press the lip seal into the shaft end cover with a lip seal installation bar (see Tool List on Page 11). The seal should be pressed in so it is flush with the recessed face in the shaft end cover casting.

### STEP 4

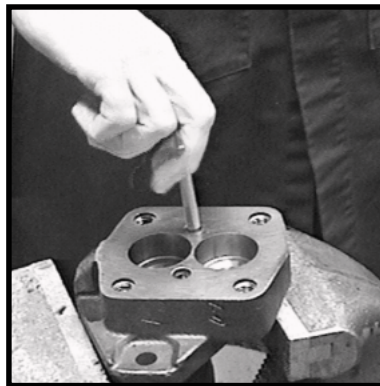


Apply Loctite® No.262 to the threaded check holes in the shaft end casting. Install the checks in the shaft end cover using the check tool (see Tool List on Page 11). The checks must bottom out in the casting.

### STEP 5

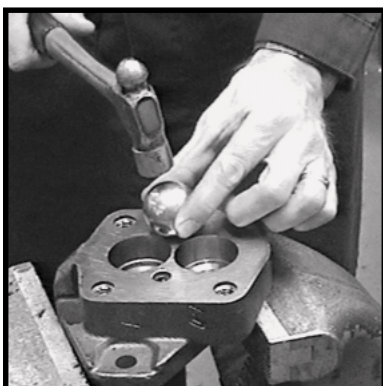

Peen over the check holes in the shaft end cover with a 1½" steel ball and a hammer. This will insure the checks do not back out of the check holes during operation.


### STEP 6

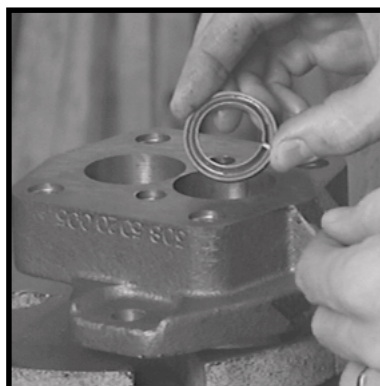

If the ring seals were removed from the shaft end cover or the port end cover, they should be replaced at this time. Place the ring seals in the bottom of the drive gear bearing bores. Be sure that the flat side of the ring seal is against the mating surface in the casting. Ring seals are placed behind the drive gear bearings only.


## PGP020™ Assembly Instructions

### STEP 7

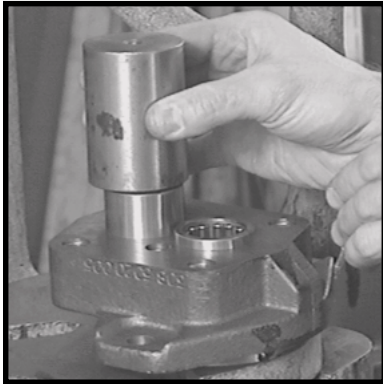

Install the bearings in the shaft end cover and the port end cover. Use an arbor press to press the bearings into the bottom of the bearing bores. Check to make sure the ring seals move freely under the drive gear bearings.

### STEP 8

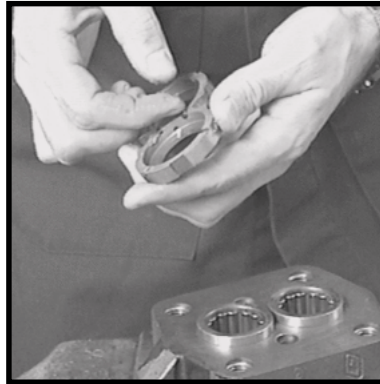


Grip the shaft end cover in a vise with the mounting face down. Cut two, pocket seals  $7/32$ " long from the pocket seal strip. Grease the seals well and insert them into the center slots on the reverse side of the thrust plate.

### STEP 9



With the pocket seals facing down, place thrust plate over the bearings. Tap the thrust plate with a soft-faced hammer around the edge until the thrust plate is about  $1/32$ " from the casting surface. Do not tap the center of the plate. Cut four pocket seals  $1/4$ " long from the seal strip. Push a pocket seal into each of the remaining slots in the thrust plate until it touches the bearing wall. Use a razor blade to trim the exposed portion of the pocket seals. The pocket seals should be flush with the outside diameter of the plate.

### STEP 10

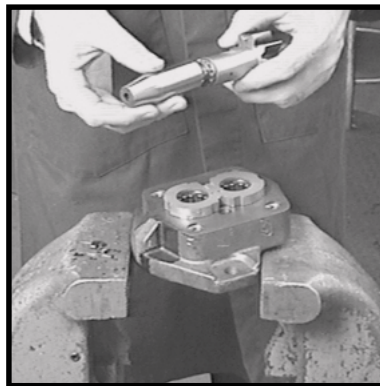

Insert the external drive end of the gear shaft into the shaft installation sleeve (see Tool List on Page 11 ). Lightly grease the gear shaft and sleeve.

### STEP 11



Insert the gear shaft with the shaft installation sleeve into the shaft end cover using a twisting motion. Be careful not to damage the lip seal. Push down carefully until the gear rests against the thrust plate face. Remove the shaft installation sleeve. Insert the idler gear into its bearing bore, matching the orientation marks on the teeth of the gear set as previously marked (see Step 7 on Page 5).


## PGP020™ Assembly Instructions

### STEP 12




Apply a light coating of grease to the new section seals and place them into the machined grooves on both sides of the gear housing. Check the section seals for proper fit.

### STEP 13

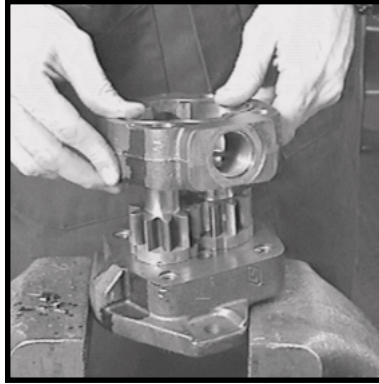


Locate the orientation mark on the gear housing and line it up with the mark on the shaft end cover. Slide the gear housing over gear set. Make sure the gear housing rests tightly against shaft end cover. Be careful not to pinch the section seal. Squirt clean, hydraulic oil over the gear shaft and the idler gear to provide initial lubrication when the pump is started.

### STEP 14

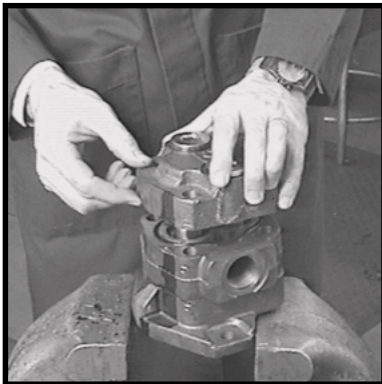


Insert the pocket seals into the thrust plate and install onto the port end cover following the previous instructions in steps 8 & 9. Then place port end cover over the gear journals. The orientation mark on port end cover must line up with the mark on the gear housing. Also, be sure bearing bore holding the ring seal goes over the drive gear journal. Apply pressure to the casting with your hand or tap lightly with a soft-faced hammer until the port end cover rests tightly against the gear housing.

### STEP 15

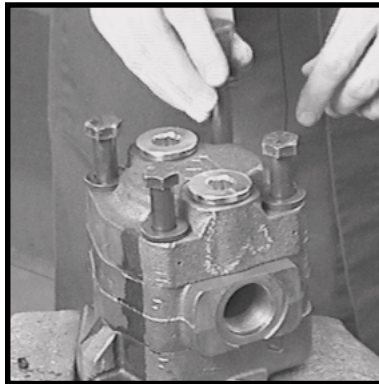

Thread the four, cap screws with the shaft end cover and tighten them in a cross-corner pattern. Rotate the gear shaft of the pump with a 6" wrench to make certain there is no binding in the pump.


### STEP 16

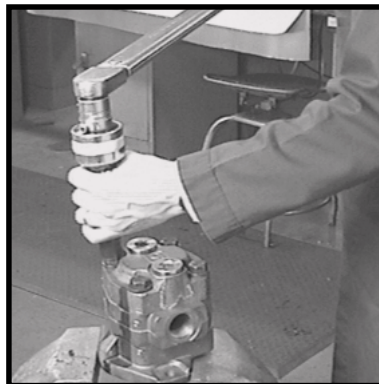

After the cap screws are tightened, make certain there is no internal binding of the gear set by rotating the gear shaft, then tighten the cap screws in a cross-corner pattern to a final torque of 2400 in. lbs. (200 ft. lbs.).




## Part Replacement Guide

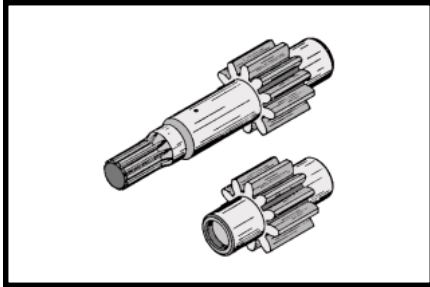


If the gear set contains any of the following defects, it should be replaced:

- Wear on the hubs or in the seal areas detectable by touch or in excess of .002".
- Score marks, grooves or burrs on the outside diameter of the teeth.
- Nicks, grooves or fretting of the teeth surfaces.
- Wear or damage to the drive spline, key or keyway.

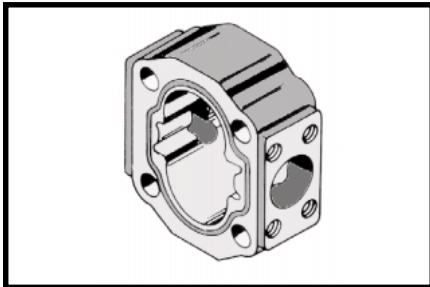

Wear in excess of .005" cut-out necessitates replacement of the gear housing. Place a straight-edge across the bore. If you can slip a .005" feeler gage in the cut-out area, replace the gear housing.


Where the cut-out is moderate, .005" or less, the gear housing is still in good condition. If the housing has equal size ports or no ports, the housing may be rotated 180°, exchanging ports, and reused.

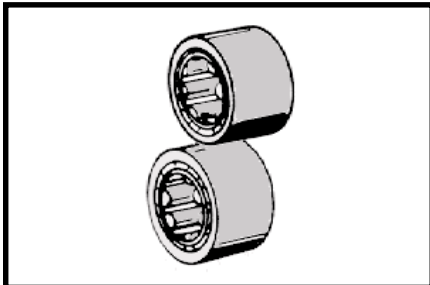

If the gears are replaced, then the bearings must be replaced also. Bearings should fit into the bores with a light press fit.



Any scratches, grooves, erosion or pitting on the thrust plate face, which is the area that comes in contact with the gear faces, requires the replacement of the thrust plates.

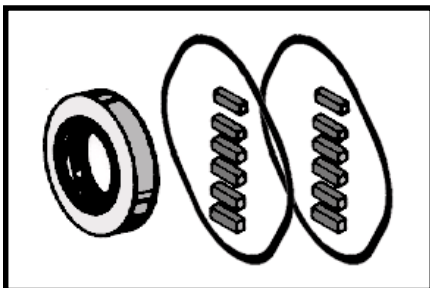

Replace all rubber and polymer seals whenever reassembling the pump. This includes lip seal, pocket seal strips and section seals.




**Tool List**

**Tool List**


- Arbor press
- Permanent marker or an awl
- Bearing puller  
(Owatonna Tool Co. MD-956 or equivalent)
- Clean, lint-free cloths
- Deburring tool (a file with the cutting teeth ground off)
- Machinist hammer
- Soft-faced hammer
- Permatex Aviation Form-A-Gasket No.3 Non-hardening Sealant or equivalent
- Medium-grit carborundum stone
- Hydraulic oil and grease
- Prick punch or machinists ink
- Sharp, razor blade
- Scale (1/32" or 1/64" graduations)
- Feeler gauges
- Small, flat-head screwdriver
- Large, flat-headed screwdrivers
- Torque wrench
- 13/16" socket
- 1½" steel ball
- Loctite® No.262
- Vise with a 6" minimum open spread
- Lip seal installation bar (1 3/4" X 2")
- Shaft installation sleeve (steel)
- Lip seal removal tool
- Check tool
- 6" wrench

**Check Tool**

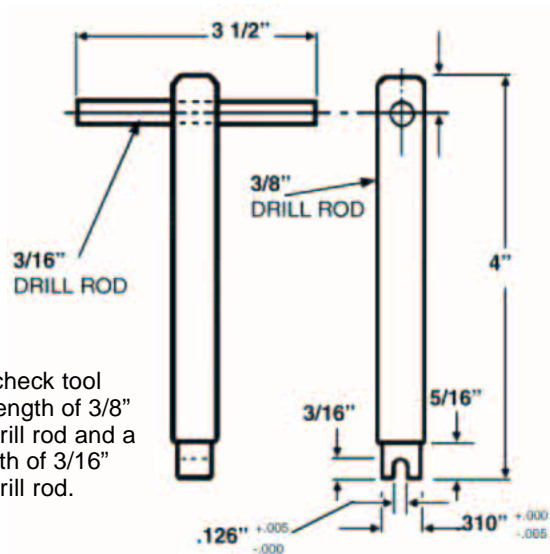

Make the check tool from a 4" length of 3/8" diameter drill rod and a 3 1/2" length of 3/16" diameter drill rod.

**Shaft Installation Sleeve (Steel)**

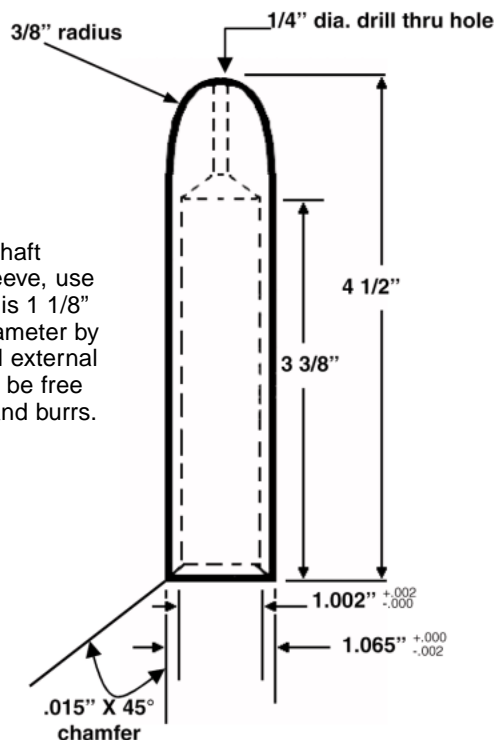

To make the shaft installation sleeve, use bar stock that is 1 1/8" or 1 1/4" in diameter by 4 5/8" long. All external surfaces must be free of scratches and burrs.

**Lip Seal Removal Tool**

A seal removal tool can be made easily from an old screwdriver. Heat the tip and bend as shown. Grind off the tip to fit the notch behind the lip seal.



## Lubrication and Oil Recommendations

All parts, with the exception of the outboard bearing, are lubricated by the hydraulic oil in the circuit. Particular attention must be paid to keep the oil in the system clean. Whenever there is a pump or motor failure and there is reason to suspect that metal particles may be in the system, the oil must be drained, the entire system flushed clean and any filter screens thoroughly cleaned or replaced. New oil should be supplied for the entire system. Oil suitable and recommended for use in circuits involving Commercial Hydraulics' pumps and motors should meet the following specifications:

- Viscosity:**
- 50 SSU minimum @ operating temperature  
7500 SSU maximum @ starting temperature
  - 150 to 225 SSU @ 100° F (37.8° C) (generally)  
44 to 48 SSU @ 210° F (98.9° C) (generally)

Approximate SSU at . . .		
Oil Grade	100 F (37.8° C)	210° F (98.9° C)
SAE 10	150	43
SAE 20	330	51

**Viscosity Index:** 90 minimum

**Aniline Point:** 175 minimum

**Recommended Additives:** Foam Depressant  
Rust and Oxidation Inhibitors

- Other Desirable Characteristics:**
- Stability of physical and chemical characteristics.
  - High demulsibility (low emulsibility) for separation of water, air and contaminants.
  - Resistant to the formation of gums, sludges, acids, tars and varnishes.
  - High lubricity and film strength.

### General Recommendations:

A good-quality, hydraulic oil conforming to the characteristics listed above is essential to the satisfactory performance and long life of any hydraulic system.

Oil should be changed on a regular schedule in accordance with the equipment manufacturer's recommendations, and the system should be periodically flushed.

Oil temperature in reservoir must not exceed 200° F (93.3° C) with a maximum temperature of 180° F (82.2° C) recommended. Higher temperatures will result in rapid oil deterioration.

Reservoir capacity should equal in gallons the pump output in gpm or the total gpm of all pumps where there is more than one in the system.

**Normal Temperatures:** 0° F (-18° C) to 100° F (37.8° C) Ambient  
100° F (37.8° C) to 180° F (82.2° C) System  
Be sure your oil is suitable for the temperatures you expect to encounter.

### Cold Weather Operation:

Oils for use in cold weather should have a viscosity that does not exceed 7500 SSU at the minimum start-up temperature. A pour point of at least 20° F below start-up temperature is recommended. Start-up procedures should allow for a gradual warm-up until the oil reaches a reasonably fluid state.

## Lubrication and Oil Recommendations

### The Use of Other Oils:

- Diesel Fuel or Kerosene (Coal Oil): These are sometimes used as dilutants for cold weather operations but are not recommended as they are not sufficiently refined products.
- Fire-Resistant Fluids: Of the several different types, only the inverted emulsion types may be used without switching to a special seal, packing, gasket, hose, etc., compositions. Their use may substantially reduce pump life. Experience indicates that the use of fire-resistant fluids can be disastrous unless certain precautions are followed. **DO NOT USE ANY FIRE RESISTANT FLUIDS OR NON-PETROLEUM OILS WITHOUT CONSULTING OUR PRODUCT SUPPORT DEPARTMENT.**
- These suggestions are intended as a guide only. **OBTAIN YOUR FINAL OIL RECOMMENDATIONS FROM YOUR OIL SUPPLIER.**

## **Recommended Start-up Procedure for New or Rebuilt Pump or Motor**

Before installing a new or a rebuilt pump or motor, back out the main relief valve until the spring tension on the adjusting screw is relaxed. This will avoid the possibility of immediate damage to the replacement unit in the event that the relief valve setting had been increased beyond the recommended operating pressure prior to removing the old unit.

Before connecting any lines to the pump or to the motor, fill all ports with clean oil to provide initial lubrication. This is particularly important when the unit is located above the oil reservoir.

After connecting the lines and mounting the replacement unit, operate the pump or the motor for at least two minutes at zero pressure at the lowest possible rpm. During this break-in period, the unit should run free and not develop an excessive amount of heat. If the unit operates properly, the speed and the pressure can then be increased to the normal operating settings.

Reset the main relief valve to its proper setting while the pump is running at the maximum operating engine (motor) speed for the vehicle.

**ALWAYS USE AN ACCURATE GAGE WHEN ADJUSTING THE RELIEF VALVE PRESSURE SETTING.**



## Test Procedure Recommended

Be sure there is an adequate supply of oil for the pump; at least one gallon of oil for each gpm of pump capacity.

If one section of a tandem pump is being tested, make sure all other sections which are not being tested, are adequately supplied with oil. If any of the other sections run dry or if plugs are left in ports, serious and permanent damage will result.

The oil should be a good-quality, hydraulic oil rated at 150 SSU at 100° F with the oil temperature held at 120° F plus or minus 5° F. (Test procedures are described in detail in SAE handbooks; see Hydraulic Power Pump Test Procedure SAE J745c.)

The inlet line must be an adequate size with no more than 5" mercury vacuum adjacent to the pump inlet. As a rule, the inlet line must provide an inlet flow velocity that is not in excess of 8 feet per second.

Hot oil drawn into a cold pump could cause it to seize. Switching the pump on and off in short bursts could help prevent seizure.

Operate the pump at least two minutes at zero pressure and at moderate speed (not over 1500 rpm).

If pump becomes hot to touch, it is binding and could seize. This rarely occurs, but if it does, the pump will

have to be disassembled and be rebuilt, taking extra care to remove burrs and to assure freedom from binding.

Gradually increase the pressure on a pump until the desired test pressure has been reached. This should take about five minutes.

Delivery should run close to the rated, catalog performance figures which are averaged from the testing of several pumps. A 5% lower reading may be used as a rated minimum, if new or relatively new parts have been used. When rebuilding the pump, reuse only those parts which appear to be in satisfactory condition. A 10% or 15% lower reading is permitted for the rebuilt pump, depending upon the performance expected from the equipment. Your individual experience is the best guide.

Many repairmen measure the output at the normal operating speed, at zero pressure, then at 1000 psi (or the operating pressure of the equipment), and allow a volume decrease approximating the listing below. The table listing shows the drop off in flow that can be expected at various operating pressures for a pump rebuilt with used parts.

PGP020 pumps are generally tested to 2000 psi.

GPM Delivery at 1800rpm	GPM Drop Off At...			
	1000 psi/70 bar	1500 psi/105 bar	2000 psi/140 bar	2500 psi/175 bar
100 psi	2 to 3	2 1/2 - 3 1/2	3 to 4	3 1/2 - 4 1/2
5 - 14	2 1/2 to 3 1/2	3 - 4	3 1/2 to 5	4 - 5 1/2
15 - 25	3 to 4	4 - 5	4 to 6	4 1/2 - 6 1/2

At test speeds other than 1800 rpm, gpm delivery will vary almost proportionately, but the same (drop-off) figures should be used.

Be sure to run the pump in the direction for which it was designed and built. Driving the pump in the wrong direction will build up pressure behind the lip seal, causing damage to the pump and necessitating its replacement.

Since it is rarely feasible to test motors on dynamometers, the practical procedure is to test them as pumps, running complete testing procedures in each direction.

After completing the testing procedures, the pump is ready for installation and immediate duty operation on equipment. It must be reinforced that to prevent seizure, hot oil must not be drawn into a cold pump.

## Instructions for Change of Rotation

The PGP020 series pump can be assembled for clockwise (CW), counterclockwise (CCW), or bi-rotational operation. The direction of rotation is determined by looking at the pump with the drive shaft facing you and the idler gear down. If the pump has unequal porting and the larger port is on the left side, then the pump is set up for CW operation. If the larger port is on the right side of the pump, then it is set up for CCW operation. Bi-rotational pumps that can be run in either direction, will have equal size ports.




### DISASSEMBLY

- 1) If the unit has a keyed shaft, remove the key.
- 2) Clamp the unit in a vise on the outside diameter of the mounting flange with the drive shaft down.
- 3) Remove the cap screws on single units or hex nuts and studs on multiple units.
- 4) Remove the port (rear) end cover.
- 5) Remove the gear housing and the gear set. Keep the gears together because they are a matched set.

**For multiple units:** Remove the bearing carrier and the next gear housing and gear set until all that remains is the shaft end cover.

**Note:** Care should be taken to avoid losing the small, rubber pocket seals fitted in the thrust plate pocket seal grooves.

- 6) Lift the thrust plate off of the shaft end cover. Do not lose the pocket seals.
- 7) Remove the check plug in the shaft end cover with a screwdriver and then install it in the opposite drain hole. Screw in tightly and stake the check plug with a punch at both edges of the screwdriver slot. For a single-rotation pump, the check plug is always located on the high pressure (outlet) side of the pump. If the shaft end cover has two check plugs, the pump is already set-up for double rotation.

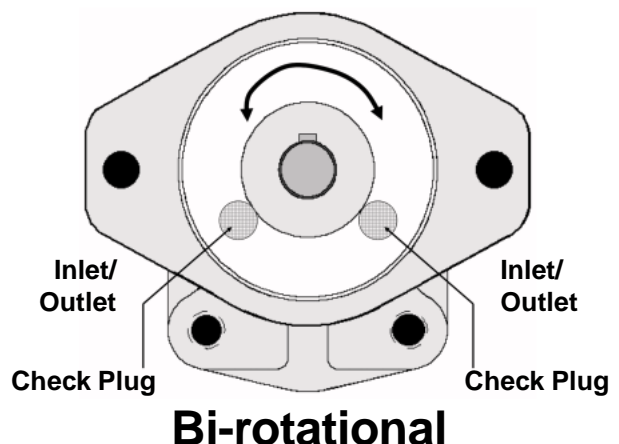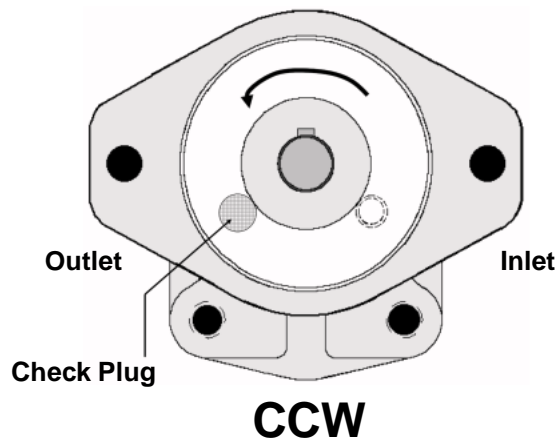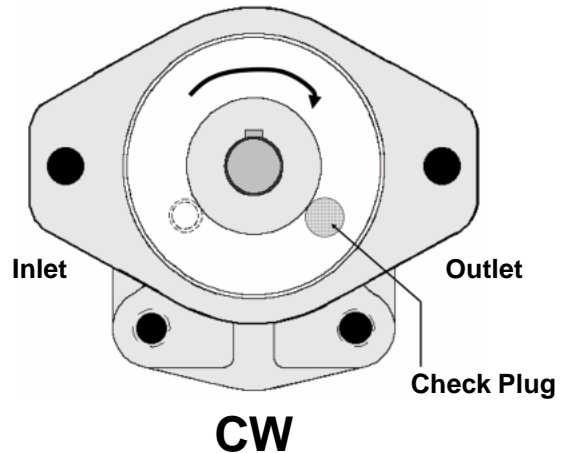

**ASSEMBLY**


- 1) Before assembling the unit, stone off the machined surfaces. This will remove any nicks or burrs that may have resulted from the disassembly.
- 2) Air blast all parts and wipe them with a clean, lint-free cloth before starting the assembly.

**Note:** PGP020 series thrust plates are designed for bi-rotational operation and do not have to be rotated.

- 3) Place one thrust plate with pocket seals over the shaft end cover bearings. Be sure the pocket seals are properly fitted in the thrust plate pocket seal grooves.
- 4) Insert the gear shaft with the shaft installation sleeve into the shaft end cover with a twisting motion. Insert the idler gear.
- 5) Rotate the gear housing 180° and carefully slide over the gear set. Make sure both section seals stay in the seal grooves during assembly. Keep the drive gear and idler gear in the same gear bore as previously marked.
- 6) For multiple units: Place the thrust plates with pocket seals over the bearings on both sides of the bearing carrier. Be sure the pocket seals are properly fitted in the thrust plate pocket seal grooves.
- 7) Rotate the bearing carrier 180° and install over the gear set and gear housing.

**Note:** If the bearing carrier has an L-shaped porting configuration, it cannot be used. A new bearing carrier will have to be machined with the proper configuration.

- 8) Insert the gears into the bearing carrier.
- 9) Rotate the gear housing 180° and carefully slide over the gear set. Make sure both section seals stay in the seal grooves during assembly.
- 10) Place the port end cover with the thrust plate over the gear set. If the port end cover is ported, it must be inverted.
- 11) Insert the cap screws or the studs into the unit and torque in a cross-corner pattern to 2400 in. lbs (200 ft. lbs).

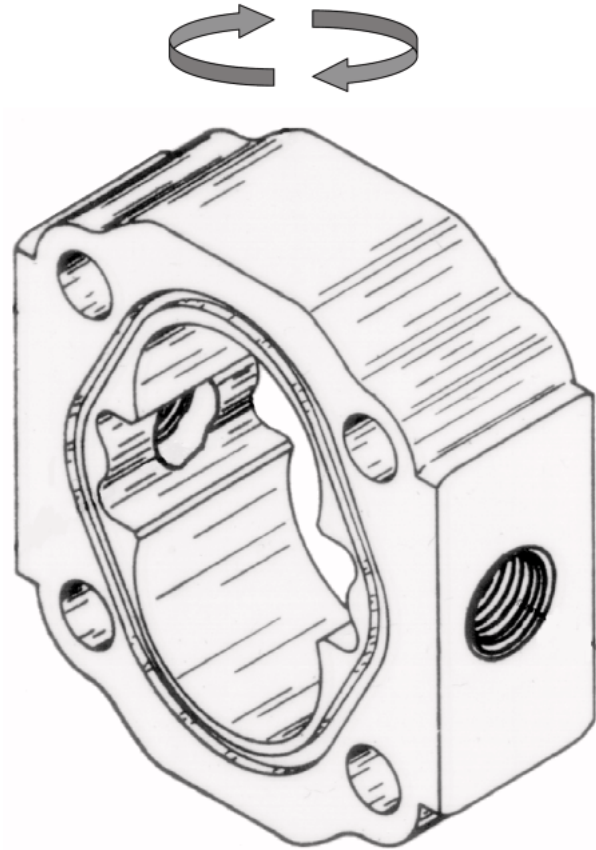**Gear Housing**







## Offer of Sale

The items described in this document are hereby offered for sale at prices to be established by Parker Hannifin Corporation, its subsidiaries and its authorized distributors. This offer and its acceptance by any customer ("Buyer") shall be governed by all of the following Terms and Conditions. Buyer's order for any item described in its document, when communicated to Parker Hannifin Corporation, its subsidiary or an authorized distributor ("Seller") verbally or in writing, shall constitute acceptance of this offer.

**1. Terms and Conditions of Sale:** All descriptions, quotations, proposals, offers, acknowledgments, acceptances and sales of Seller's products are subject to and shall be governed exclusively by the terms and conditions stated herein. Buyer's acceptance of any offer to sell is limited to these terms and conditions. Any terms or conditions in addition to, or inconsistent with those stated herein, proposed by Buyer in any acceptance of an offer by Seller, are hereby objected to. No such additional, different or inconsistent terms and conditions shall become part of the contract between Buyer and Seller unless expressly accepted in writing by Seller. Seller's acceptance of any offer to purchase by Buyer is expressly conditional upon Buyer's assent to all the terms and conditions stated herein, including any terms in addition to, or inconsistent with those contained in Buyer's offer. Acceptance of Seller's products shall in all events constitute such assent.

**2. Payment:** Payment shall be made by Buyer net 30 days from the date of delivery of the items purchased hereunder. Any claims by Buyer for omissions or shortages in a shipment shall be waived unless Seller receives notice thereof within 30 days after Buyer's receipt of the shipment.

**3. Delivery:** Unless otherwise provided on the face hereof, delivery shall be made F.O.B. Seller's plant. Regardless of the method of delivery, however, risk of loss shall pass to Buyer upon Seller's delivery to a carrier. Any delivery dates shown are approximate only and Seller shall have no liability for any delays in delivery.

**4. Warranty:** Seller warrants that the item sold hereunder shall be free from defects in material or workmanship for a period of 547 days from the date of shipment to Buyer, or 3,000 hours of use, whichever expires first. **THIS WARRANTY COMPRISES THE SOLE AND ENTIRE WARRANTY PERTAINING TO ITEMS PROVIDED HEREUNDER. SELLER MAKES NO OTHER WARRANTY, GUARANTEE, OR REPRESENTATION OF ANY KIND WHATSOEVER. ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO, MERCHANTABILITY AND FITNESS FOR PURPOSE, WHETHER EXPRESS, IMPLIED, OR ARISING BY OPERATION OF LAW, TRADE USAGE, OR COURSE OF DEALING ARE HEREBY DISCLAIMED.**

**NOTWITHSTANDING THE FOREGOING, THERE ARE NO WARRANTIES WHATSOEVER ON ITEMS BUILT OR ACQUIRED WHOLLY OR PARTIALLY, TO BUYERS DESIGNS OR SPECIFICATIONS.**

**5. Limitation of Remedy: SELLER'S LIABILITY ARISING FROM OR IN ANY WAY CONNECTED WITH THE ITEMS SOLD OR THIS CONTRACT SHALL BE LIMITED EXCLUSIVELY TO REPAIR OR REPLACEMENT OF THE ITEMS SOLD OR REFUND OF THE PURCHASE PRICE PAID BY BUYER, AT SELLER'S SOLE OPTION IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR SEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND OR NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS ARISING FROM OR IN ANY WAY CONNECTED WITH THIS AGREEMENT OR ITEM SOLD HEREUNDER, WHETHER ALLEGED TO ARISE FROM BREACH OF CONTRACT, EXPRESS OR IMPLIED WARRANTY, OR IN TORT, INCLUDING WITHOUT LIMITATION, NEGLIGENCE, FAILURE TO WARN OR STRICT LIABILITY.**

**6. Changes, Reschedules and Cancellations:** Buyer may request to modify the designs or specifications for the items sold hereunder as well as the quantities and delivery dates thereof, or may request to cancel all or part of this order, however, no such requested modification or cancellation shall become part of the contract between Buyer and Seller unless accepted by Seller in a written amendment to this Agreement. Acceptance of any such requested modification or cancellation shall be at Seller's discretion, and shall be upon such terms and conditions as Seller may require.

**7. Special Tooling:** A tooling charge may be imposed for any special tooling, including without limitation, dies, fixtures, molds and patterns, acquired to manufacture items sold pursuant to this contract. Such special tooling shall be and remain Seller's property notwithstanding payment of any charges by Buyer. In no event will Buyer acquire any interest in apparatus belonging to Seller which is utilized in the manufacture of the items sold hereunder, even if such apparatus has been specially converted or adapted for such manufacture and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller shall have the right to alter, discard or otherwise dispose of any special tooling or other property in its sole discretion at any time.

**8. Buyer's Property:** Any designs, tools, patterns, materials, drawings, confidential information or equipment furnished by Buyer or any other items which become Buyer's property, may be considered obsolete and may be destroyed by Seller after two (2) consecutive years have elapsed without Buyer placing an order for the items which are manufactured using such property. Seller shall not be responsible for any loss or damage to such property while it is in Seller's possession or control.

**9. Taxes:** Unless otherwise indicated on the face hereof, all prices and charges are exclusive of excise, sales, use, property, occupational or like taxes which may be imposed by any taxing authority upon the manufacture, sale or delivery of the items sold hereunder. If any such taxes must be paid by Seller or if Seller is liable for the collection of such tax, the amount thereof shall be in addition to the amounts for the items sold. Buyer agrees to pay all such taxes or to reimburse Seller therefore upon receipt of its invoice. If Buyer claims exemption from any sales, use or other tax imposed by any taxing authority, Buyer shall save Seller harmless from and against any such tax, together with any interest or penalties thereon which may be assessed if the items are held to be taxable.

**10. Indemnity For Infringement of Intellectual Property Rights:** Seller shall have no liability for infringement of any patents, trademarks, copyrights, trade dress, trade secrets or similar rights except as provided in this Part 10. Seller will defend and indemnify Buyer against allegations of infringement of U.S. patents, U.S. trademarks, copyrights, trade dress and trade secrets (hereinafter 'Intellectual Property Rights'). Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on an allegation that an item sold pursuant to this contract infringes the Intellectual Property Rights of a third party. Seller's obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of such allegations of infringement, and Seller having sole control over the defense of any allegations or actions including all negotiations for settlement or compromise. If an item sold hereunder is subject to a claim that it infringes the Intellectual Property Rights of a third party, Seller may, at its sole expense and option, procure for Buyer the right to continue using said item, replace or modify said item so as to make it noninfringing, or offer to accept return of said item and return the purchase price less a reasonable allowance for depreciation. Notwithstanding the foregoing Seller shall have no liability for claims of infringement based on information provided by Buyer, or directed to items delivered hereunder for which the designs are specified in whole or part by Buyer, or infringements resulting from the modification, combination or use in a system of any item sold hereunder. The foregoing provisions of this Part 10 shall constitute Seller's sole and exclusive liability and Buyer's sole and exclusive remedy for infringement of Intellectual Property Rights.

If a claim is based on information provided by Buyer or if the design for an item delivered hereunder is specified in whole or in part by Buyer, Buyer shall defend and indemnify Seller for all costs, expenses or judgments resulting from any claim that such item infringes any patent, trademark, copyright, trade dress, trade secret or any similar right.

**11. Force Majeure:** Seller does not assume the risk of and shall not be liable for delay or failure to perform any of Seller's obligations by reason of circumstances beyond the reasonable control of Seller (hereinafter 'Events of Force Majeure'). Events of Force Majeure shall include without limitation, accidents, acts of God, strikes or labor disputes, acts, laws, rules or regulations of any government or government agency, fires, floods, delays or failures in delivery of carriers or suppliers, shortages of materials and any other cause beyond Seller's control.

**12. Entire Agreement/Governing Law:** The terms and conditions set forth herein, together with any amendments, modifications and any different terms or conditions expressly accepted by Seller in writing, shall constitute the entire Agreement concerning the items sold, and there are no oral or other representations or agreements which pertain thereto. This Agreement shall be governed in all respects by the law of the State of Ohio. No actions arising out of the sale of the items sold hereunder or this Agreement may be brought by either party more than two (2) years after the cause of action accrues.



**Parker Hannifin Corporation**  
 6035 Parkland Blvd.  
 Cleveland, Ohio 44124-4141  
 Telephone: (216) 896-3000  
 Fax: (216) 896-4000  
 Web site: www.parker.com

## **Parker Hannifin Corporation**

### **About Parker Hannifin Corporation**

Parker Hannifin is a leading global motion-control company dedicated to delivering premier customer service. A Fortune 500 corporation listed on the New York Stock Exchange (PH), our components and systems comprise over 1,400 product lines that control motion in some 1,000 industrial and aerospace markets. Parker is the only manufacturer to offer its customers a choice of hydraulic, pneumatic, and electromechanical motion-control solutions. Our Company has the largest distribution network in its field, with over 7,500 distributors serving more than 350,000 customers worldwide.

### **Parker's Charter**

To be a leading worldwide manufacturer of components and systems for the builders and users of durable goods. More specifically, we will design, market and manufacture products controlling motion, flow and pressure. We will achieve profitable growth through premier customer service.

### **Product Information**

North American customers seeking product information, the location of a nearby distributor, or repair services will receive prompt attention by calling the Parker Product Information Center at our toll-free number: 1-800-C-PARKER (1-800-272-7537). In the UK, a similar service is available by calling 0500-103-203.

#### **The Aerospace Group**

is a leader in the development, design, manufacture and servicing of control systems and components for aerospace and related high-technology markets, while achieving growth through premier customer service.



#### **The Climate & Industrial Controls Group**

designs, manufactures and markets system-control and fluid-handling components and systems to refrigeration, air-conditioning and industrial customers worldwide.



#### **The Fluid Connectors Group**

designs, manufactures and markets rigid and flexible connectors, and associated products used in pneumatic and fluid systems.



**The Seal Group** designs, manufactures and distributes industrial and commercial sealing devices and related products by providing superior quality and total customer satisfaction.



#### **The Hydraulics Group**

designs, produces and markets a full spectrum of hydraulic components and systems to builders and users of industrial and mobile machinery and equipment.



#### **The Filtration Group**

designs, manufactures and markets quality filtration and clarification products, providing customers with the best value, quality, technical support, and global availability.



#### **The Automation Group**

is a leading supplier of pneumatic and electro-mechanical components and systems to automation customers worldwide.



#### **The Instrumentation Group**

is a global leader in the design, manufacture and distribution of high-quality critical flow components for worldwide process instrumentation, ultra-high-purity, medical and analytical applications.



**Parker Hannifin Corporation**  
 Gear Pump Division  
 Youngstown, Ohio USA



**Parker Hannifin Corporation**  
Gear Pump Division  
1775 Logan Avenue  
Youngstown, OH 44501 USA  
Tel: (330) 746-8011  
Fax: (330) 746-1148  
<http://www.parker.com/gearpump>

Service Manual  
HY09-SM020/US  
2.5M, 07/06, T&M